




Disconnect the throttle cable ends from the throttle pipe and remove the housing.

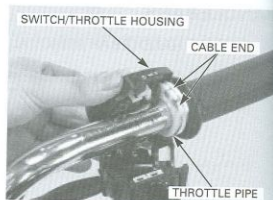

Remove the throttle pipe.

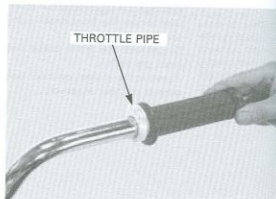

Remove the right rearview mirror. Disconnect the clutch switch wire connectors from the switch. Remove the clutch lever bracket holder bolts, holder and clutch lever bracket assembly.

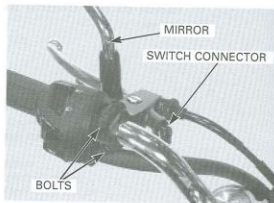

Remove the screws and left handlebar switch housing.

