



Remove the fork bolt from the fork tube.

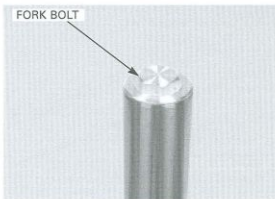


Hold the damper rod lock nut with a 14 mm spanner, then loosen and remove the fork bolt from the damper rod.

Remove the spring.

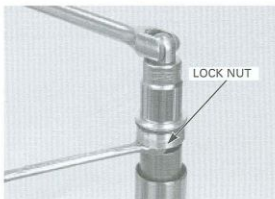

Remove the following:

- Spring collar
- Spring seat

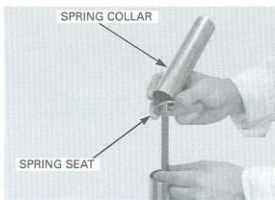

- Fork spring

