


Be sure the oil level is the same in both forks.


Measure the oil level from the top of the fork tube while compressing the tube all the way after stroking the fork tube slowly more than 5 times and the damper rod more than 10 times.

FORK OIL LEVEL: 155 mm (6.1 in)

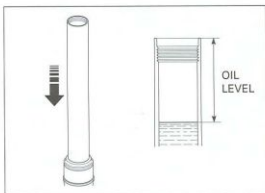


Pull the damper rod up and install the fork spring with the tapered end facing down.

Screw the damper rod end nut fully by hand.

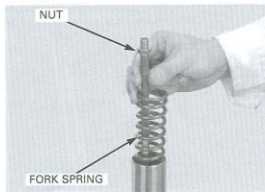

Install the spring seat and spring collar.

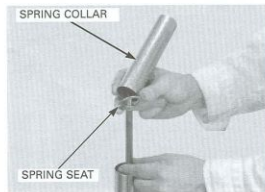

Install a new O-ring onto the fork bolt.
Apply fork fluid to the new O-ring.

Hold the damper rod and screw the fork bolt onto the damper rod until it seats on the damper rod lock nut.

Hold the fork bolt and tighten the lock nut to the specified torque.

TORQUE: 22 N·m (2.2 kgf·m, 16 lbf·ft)

