

Tighten the fork bolt to the specified torque if it was removed.

TORQUE: 22 N·m (2.2 kgf·m, 16 lbf·ft)

Install the following:

- Front fender (page 2-3)
- Front wheel (page 13-14)




STEERING STEM

REMOVAL


Remove the following:

- Handlebar (page 13-3)
- front wheel (page 13-10)
- Combination meter (page 19-8)
- Fork (page 13-15)

Remove the socket bolts/nuts and headlight/meter mount stay.

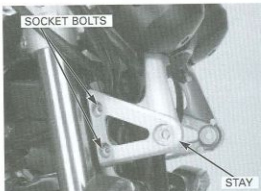

Remove the bolt and front brake hose clamp.

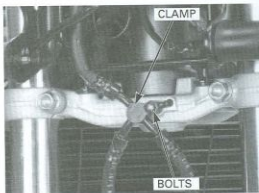

Remove the stem nut, washer and the top bridge.

