


## FRONT WHEEL/SUSPENSION/STEERING

Retighten the bearing adjusting nut to the specified torque.


**TORQUE: 25 N·m (2.5 kgf·m, 18 lbf·ft)**

Recheck that the steering stem moves smoothly without play or binding.

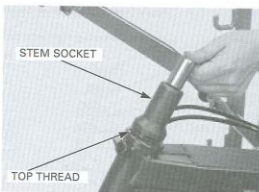


Install the new lock washer onto the steering stem.

Align the tabs of the lock washer with the grooves in the adjustment nut and bend two opposite tabs (shorter) down into the adjustment nut groove.

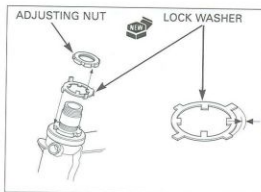

Install and finger tighten the lock nut. Hold the lock nut and further tighten the lock nut with in 1/4 turn (90°) enough to align its grooves with the lock washer tabs.

Bend the lock washer tabs up into the lock nut groove.

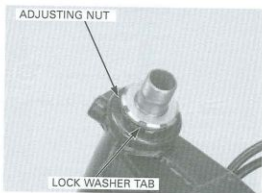

Install the turn signal light bracket.

