


SWINGARM


REMOVAL

Remove the rear wheel (page 14-3).

Remove the socket bolts and drive chain case.

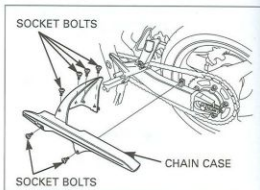


Remove the swingarm pivot cover.

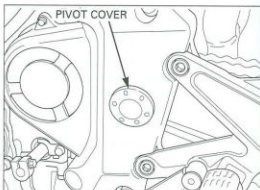

Remove the swingarm pivot nut and washer.

Remove the swingarm pivot bolt and swingarm.

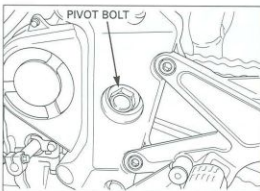

DISASSEMBLY/INSPECTION

Remove the bolts and drive chain adjuster.

