

## BRAKE FLUID REPLACEMENT/AIR BLEEDING

### NOTICE

- Do not allow foreign material to enter the system when filling the reservoir.
- Avoid spilling fluid on painted, plastic, or rubber parts. Place a rag over these parts whenever the system is serviced.

### BRAKE FLUID DRAINING

For the front brake, turn the handlebar until the reservoir is parallel to the ground, before removing the reservoir cap.

Remove the screws and reservoir cap.

Remove the diaphragm plate and diaphragm.

Remove the reservoir cap.

Remove the diaphragm plate and diaphragm.

