


ASSEMBLY

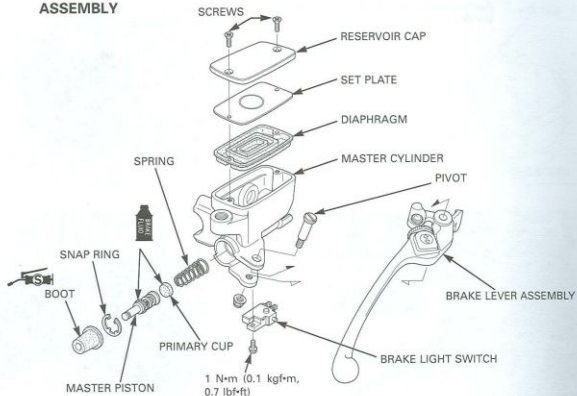


Keep the piston, cups, spring, snap ring and boot as a set; do not substitute individual parts.

Coat all parts with clean brake fluid before assembly.

When installing the cups, do not allow the lips to turn inside out.

Dip the piston in brake fluid.
Install the spring into the piston.
Install the piston assembly into the master cylinder.

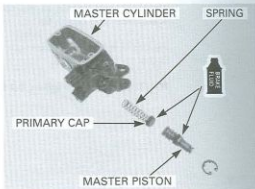

Install the snap ring.

TOOL:
Snap ring pliers

07914-SA50001

Be certain the snap ring is firmly seated in the groove.

