

HYDRAULIC BRAKE

Coat the new piston seals with clean brake fluid.
Coat the new dust seals with silicone grease.

Install the piston and dust seal into the groove of the caliper body.

Coat the caliper pistons with clean brake fluid and install them into the caliper cylinder with their opening ends toward the pad.

Install the new joint seals into the fluid passages on the caliper.

Assemble the caliper halves.

Apply a locking agent to the caliper assembly bolt threads.

Install and tighten the caliper assembly bolts to the specified torque.

TORQUE: 32 N·m (3.3 kgf·m, 24 lbf·ft)

INSTALLATION

Install the brake pads (page 15-6).

Install the brake caliper onto the fork leg.
Install and tighten the new caliper mounting bolts to the specified torque.

TORQUE: 30 N·m (3.1 kgf·m, 22 lbf·ft)

Install the brake hose eyelet to the caliper body with two new sealing washers and the oil bolt.

