

STARTER MOTOR

REMOVAL

With the ignition switch turned to "OFF", remove the negative cable at the battery before servicing the starter motor.



Remove the air cleaner housing (page 5-53).

With the ignition switch OFF, remove the negative cable at the battery before servicing the starter motor.

Remove the nut and the starter motor cable from the starter motor.

Remove the starter motor mounting bolts and ground cable.


Pull the starter motor out of the crankcase.

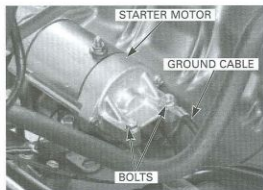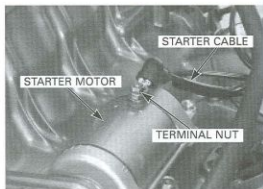

DISASSEMBLY

Remove the following:

- Starter motor case bolts
- Rear cover

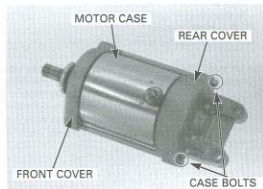

- Front cover
- Seal ring
- Lock washer
- Insulated washer
- Shims
- Armature

Record the location and number of shims.

