


## INSPECTION


Check for continuity between the brush and cable terminal (the indigo colored wire on the insulated brush holder).

There should be continuity.

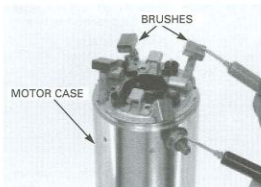

Check for continuity between the motor case and cable terminal.

There should be no continuity.

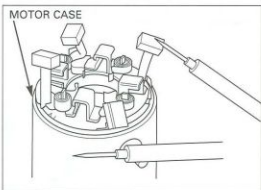

Inspect the brushes for damage and measure the brush length.

**SERVICE LIMIT: 4.5 mm (0.18 in)**



Check the bushing in the rear cover for wear or damage.

