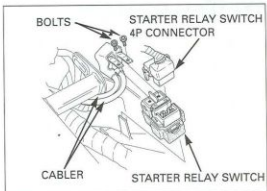


REMOVAL/INSTALLATION

Remove the right side cover (page 2-2).


Disconnect the starter relay 4P connector.
Disconnect the cables from the starter relay.

Remove the starter relay assembly from the frame guide.

**DIODE****REMOVAL**

Remove the right side cover (page 2-2).

Open the fuse box and remove the diode.

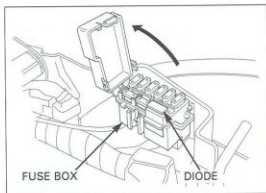**INSPECTION**

Check for continuity between the diode terminals. When there is continuity, a small resistance value will register.

If there is continuity, in one direction, the diode is normal.

INSTALLATION

Install the diode in the reverse order of removal.

