


**REMOVAL/INSTALLATION**

Remove the headlight case (page 19-5).  
Disconnect the turn signal wire connectors.



Remove the turn signal mounting nut.  
Release the turn signal wire and remove the turn signal unit.

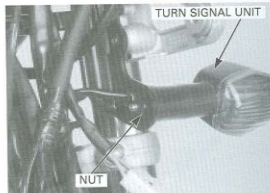


*Route the turn signal wire properly (page 1-25).*

Install the turn signal unit in the reverse order of removal.

**TAIL/BRAKE LIGHT****BULB REPLACEMENT**

Remove the screws and tail/brake light lens.

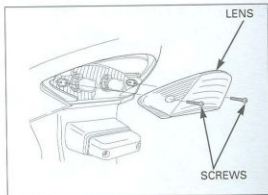

Remove the tail/brake light bulbs and replace with new ones.

Install the tail/brake light lens in the reverse order of removal.

