


FAN CONTROL RELAY

INSPECTION


Remove the under cowls/middle cowls (page 3-7).

Remove the relay box from the bracket.

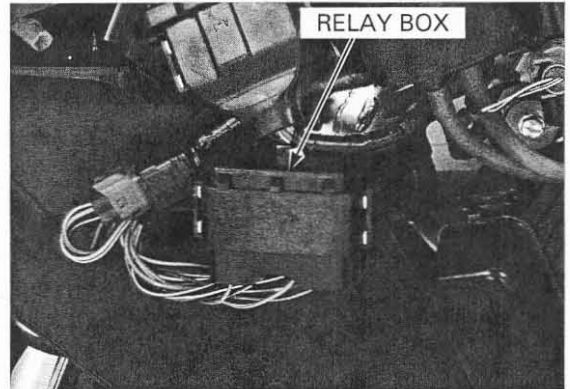

Release the retainers (brown) and remove the relay connector base.

Remove the fan control relay from the connector base.

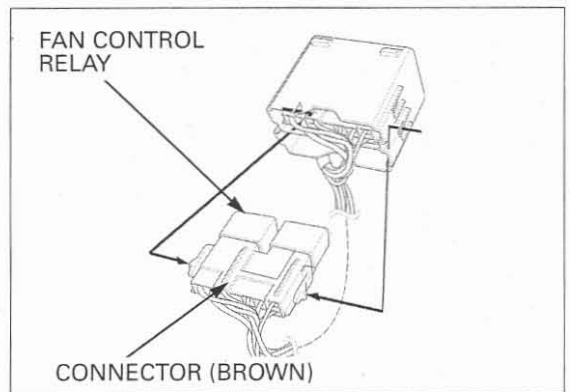

Connect the ohmmeter to the fan control relay connector terminals.

Connection: A – B

Connect a 12 V battery to the following engine stop relay connector terminals.

Connection: C (+) – D (-)

There should be continuity only when the 12 V battery is connected.

If there is no continuity when the 12 V battery is connected, replace the fan control relay.

