

10. CLUTCH/STARTER CLUTCH

COMPONENT LOCATION	10-2	CLUTCH SLAVE CYLINDER	10-13
SERVICE INFORMATION	10-4	RIGHT CRANKCASE COVER REMOVAL ..	10-15
TROUBLESHOOTING	10-5	CLUTCH.....	10-16
CLUTCH FLUID REPLACEMENT/ AIR BLEEDING	10-6	STARTER CLUTCH	10-28
CLUTCH MASTER CYLINDER.....	10-8	RIGHT CRANKCASE COVER INSTALLATION.....	10-34

10