

## CLUTCH MASTER CYLINDER

### REMOVAL


#### NOTICE

*Spilled fluid can damage painted, plastic, or rubber parts. Place a shop towel over these parts whenever the system is serviced.*


Drain the clutch hydraulic system (page 10-6).

Disconnect the clutch switch wire connectors.

Remove the clutch hose oil bolt, sealing washers and clutch hose eyelet.

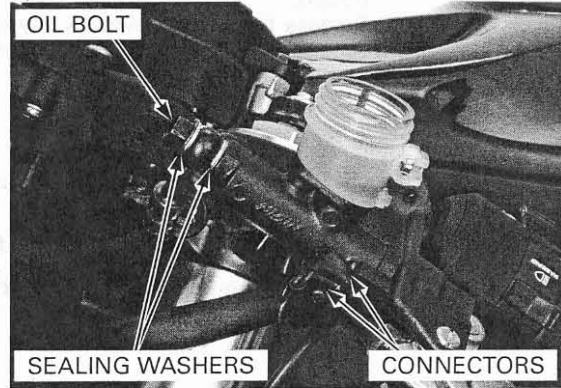

Remove the bolts from the master cylinder holder and remove the master cylinder assembly.

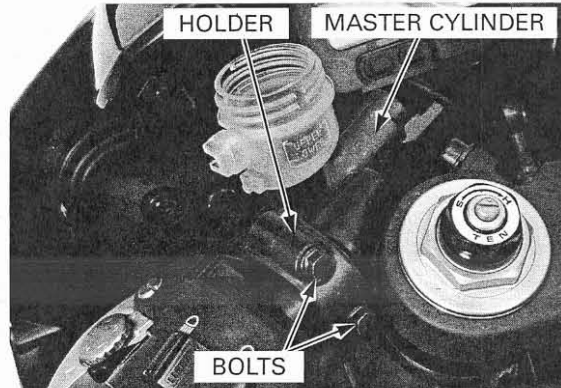

### DISASSEMBLY

Remove the pivot bolt/nut and clutch lever assembly.

