



Check the dust seal for wear or damage.
Check the needle bearing for wear or damage.

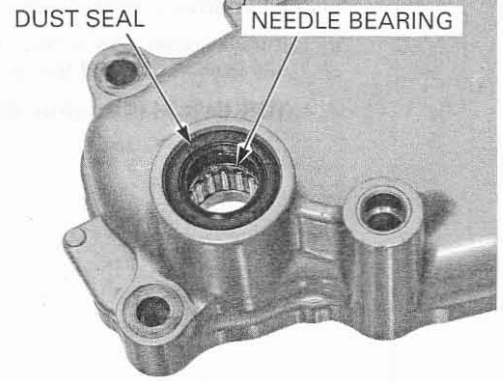


INSTALLATION

Install the gearshift spindle and washers.

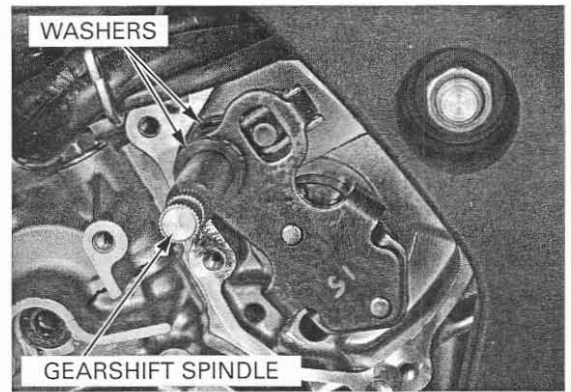

Install a dowel pins and new gasket.

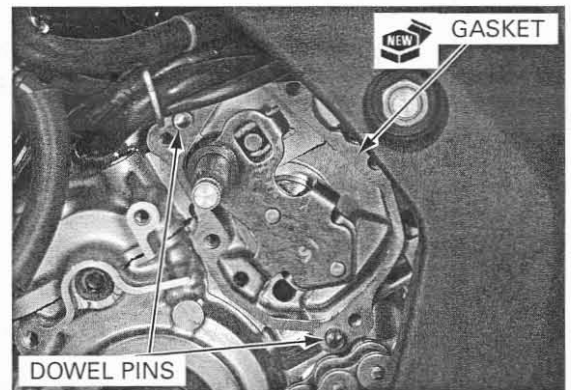

Install the gearshift linkage cover being careful not to damage the oil seal lips.

Apply a locking agent to the threads of the bolt indicated.

Install and tighten the linkage cover bolts.

