


## REAR WHEEL/SUSPENSION

Install a new stopper ring into the groove of the shock absorber pivot securely.

*The left pivot dust seal O.D. is larger than right pivot dust seal O.D.*

Apply grease to the new dust seal lips and install them into the shock absorber pivot.

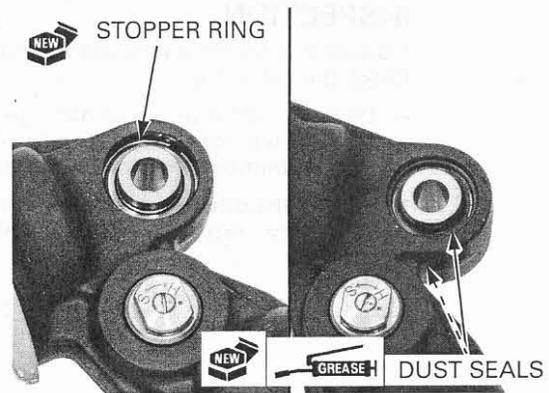


### SHOCK ABSORBER DISPOSAL PROCEDURE

*Do not remove the valve core until pressure is released.*


Remove the shock absorber reservoir cap. Put on safety glasses, then release the nitrogen from the reservoir by depressing the valve core.

- Point the valve away from you to prevent debris getting in your eyes.
- Before disposal of the shock absorber, release the nitrogen by pressing the valve core. Then remove the valve from the shock absorber reservoir.

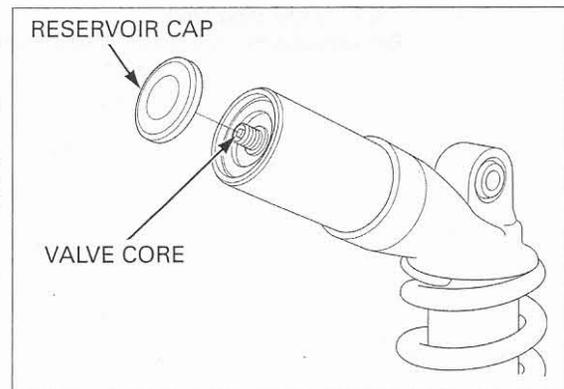

### INSTALLATION

Set the shock absorber to the upper mount with the rebound damping adjuster facing left. Install the upper mounting bolt and nut.

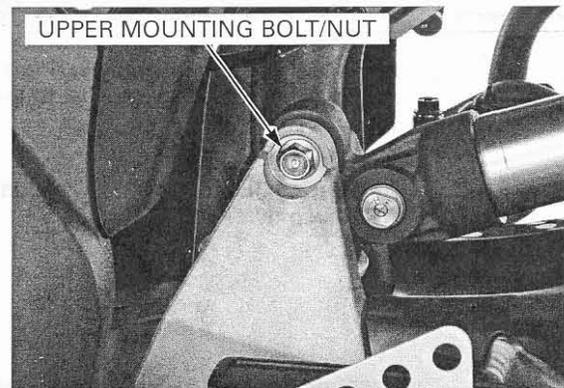

Install the lower mounting bolt and nut. Tighten the upper and lower mounting nuts to the specified torque.

**TORQUE: 44 N·m (4.5 kgf·m, 33 lbf·ft)**

