


Remove the bulb from the socket, and replace it with new one.


Install the removed parts in the reverse order of removal.

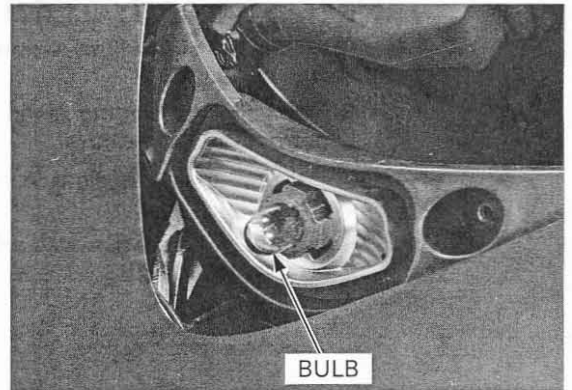


TURN SIGNAL

BULB REPLACEMENT

Remove the screw, turn signal light lens and seal rubber.

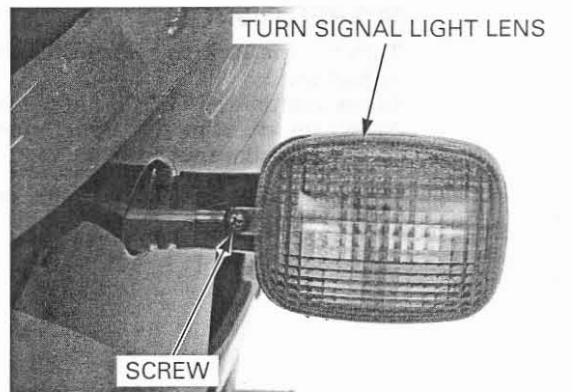

While pushing in, turn the bulb counterclockwise to remove it and replace with new one.

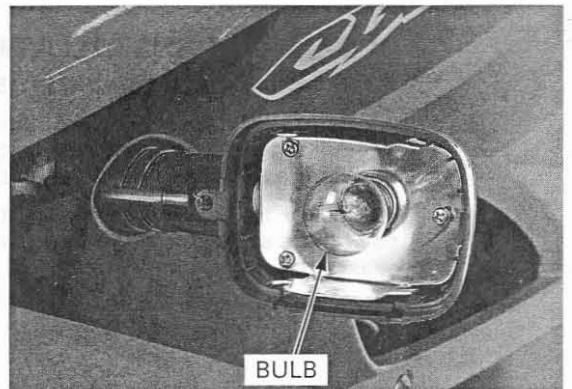

Install the seal rubber onto the turn signal light case.

Install the lens by aligning the lens tab with the turn signal light case groove, and tighten the screw securely.

