

LIGHTS/METERS/SWITCHES


REMOVAL/INSTALLATION

For front turn signal light removal, remove the middle cowls (page 3-7).

Remove the nut, setting plate and the turn signal light from the middle cowl.

Install the turn signal light in the reverse order of removal.

For rear turn signal removal, see rear fender A disassembly (page 3-20).

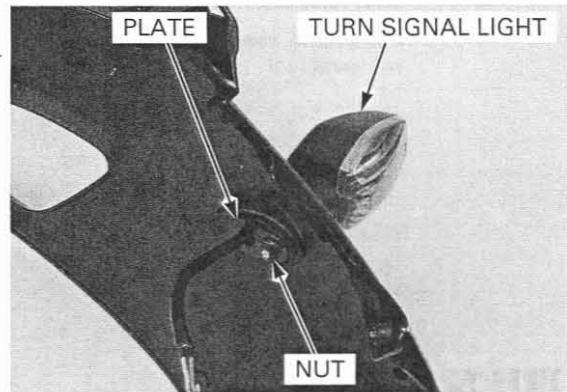

TAIL/BRAKE LIGHT


INSPECTION

Turn the ignition switch ON, and check the taillight operation.

Check that all LED in the tail/brake light unit light illuminate with the front brake lever and/or rear brake pedal applied.

If any LED does not turn on, replace the tail/brake light assembly.

TAIL/BRAKE LIGHT UNIT

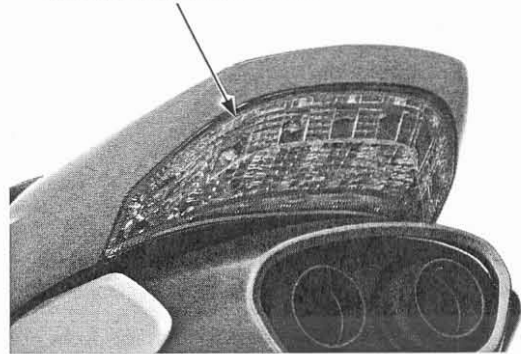

REMOVAL/INSTALLATION

Remove the rear seat cowl (page 3-5).

Remove the tail/brake light unit mounting screws. Pull out the tabs from the grooves of rear seat cowl, then remove the tail/brake light unit.

Install the tail/brake light unit onto the rear seat cowl while aligning the tabs with groove of the rear seat cowl.

Installation is in the reverse order of removal.

