

LIGHTS/METERS/SWITCHES

TURN SIGNAL SWITCH:


	W	R	L	P	PR	PL
R	○—○			○—○	○—○	
N				○—○—○		
L	○—○		○—○	○—○		
COLOR	Gr	Lb	O	Br/W	Lb/W	O/W

DIMMER SWITCH:

	HL	Lo	Hi
Lo			
(N)	○—○		○—○
Hi	○—○		○—○
COLOR	Bu/W		W

HORN SWITCH:


	Ho	BAT
FREE		
PUSH	○—○	
COLOR	B	W/G

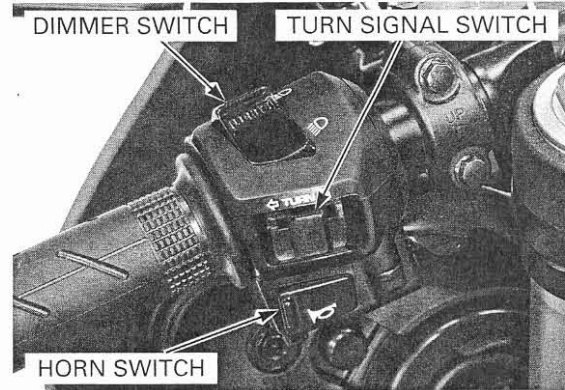

BRAKE LIGHT SWITCH

FRONT

Disconnect the front brake light switch connectors and check for continuity between the terminals. There should be continuity with the brake lever applied, and there should be no continuity when the brake lever is released.

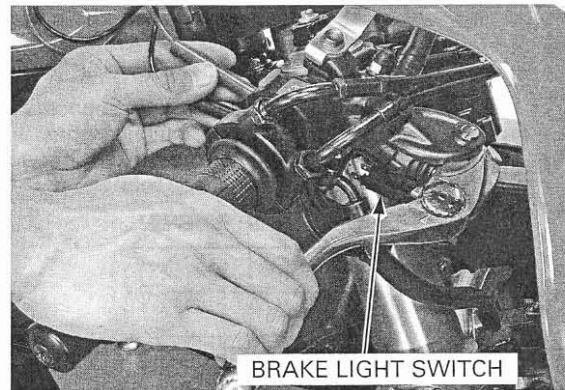

REAR

Remove the right middle cowl (page 3-7).

Disconnect the rear brake light switch 2P (Black) connector.

