

SIDE STAND SWITCH

INSPECTION

Remove the left under and middle cowls (page 3-7).
Remove the wire band and pull out the 2P (Green) connector from the connector boot.

Disconnect the side stand switch 2P (Green) connector.
Check for continuity between the wire terminals of the side stand switch 2P (Green) connector. Continuity should exist only when the side stand is up.

REMOVAL

Remove the wire band and pull out the 2P (Green) connector from the connector boot (page 20-22).
Disconnect the side stand switch 2P (Green) connector.

Remove the bolt and side stand switch.

