


Pull the middle fairing out and down until the tabs can be removed from the grooves in the upper fairing.


CAUTION

- Do not damage the middle fairing tabs and upper fairing grooves.

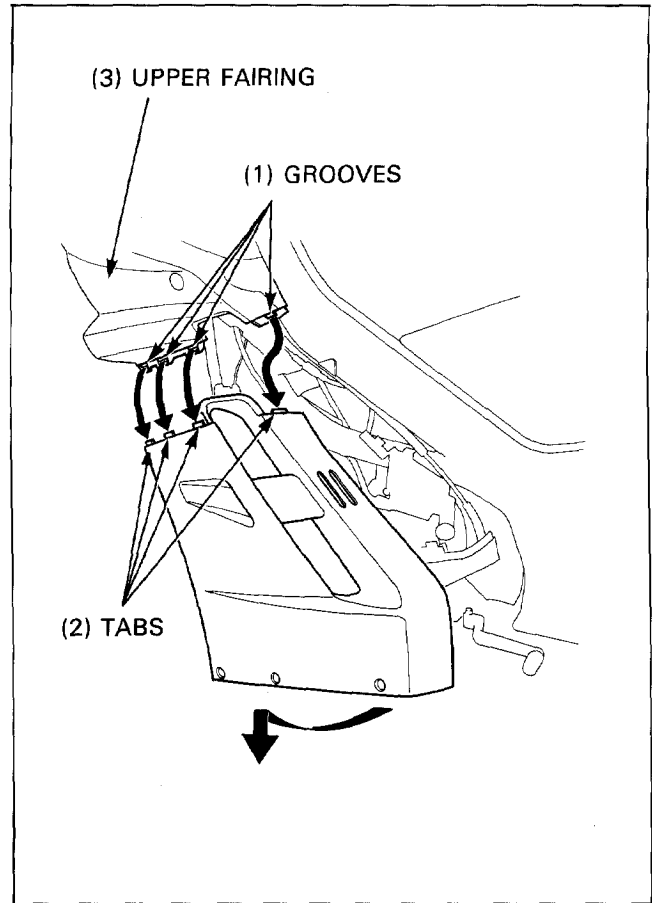

Installation

Install tabs ① through ③ the left middle fairing into the left upper fairing by placing area A underneath area C.

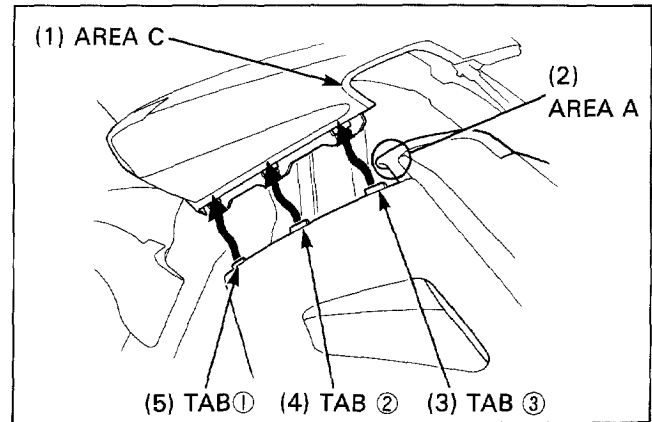

Gently press the lower portion of the left middle fairing in the direction shown by the arrow so that area B is underneath area D.

