

Requisite Service

- Fork removal (page 12-8)

Procedure		Q'ty	Remarks
Disassembly Order			
(1)	Fork tube protector (After '93)	1	NOTE: • Do not remove unless necessary. ⚠ WARNING • The fork cap bolt is under high pressur. Use care when loosening the bolt. Remove the fork cap bolt holding the lock nut as shown. After removing, drain the remaining fork oil completely. When removing them, do not damage the fork tube. NOTE: • Temporarily install the spring and fork cap bolt if difficulty is encountered when removing the socket bolt.
(2)	Fork cap bolt	1	
(3)	O-ring	1	
(4)	Lock nut	1	
(5)	Retainer	1	
(6)	Seat washer	1	
(7)	Spacer (After '93)	1	
(8)	Spring seat (After '93)	1	
(9)	Fork spring	1	
(10)	Dust seal	1	
(11)	Stopper ring	1	
(12)	Fork pinch bolt	1	
(13)	Fork socket bolt	1	
(14)	Fork tube	1	
(15)	Fork cylinder assembly	1	
(16)	Rebound spring	1	
(17)	Oil seal	1	
(18)	Back up ring	1	
(19)	Slider bushing	1	
(20)	Fork tube bushing	1	NOTE: • Do not remove it unless it is necessary to replace.
(21)	Oil lock piece	1	
(22)	Fork slider	1	