

Charging Coil Inspection

NOTE

- It is not necessary to remove the alternator from the engine.

Disconnect the alternator 3P connector and measure the resistance between connector terminals (Yellow and Yellow).

Standard: 0.1–1.0Ω (20°C/68°F)

Check for continuity between the Yellow wire terminal and ground. There should be no continuity.

(1) ALTERNATOR CONNECTOR

