



## CLUTCH/KICKSTARTER/GEARSHIFT LINKAGE


Remove the bolt and kickstarter pedal.

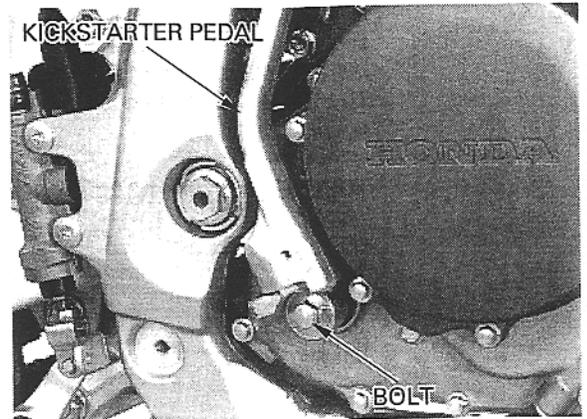

Remove the bolts, nut and right crankcase cover.

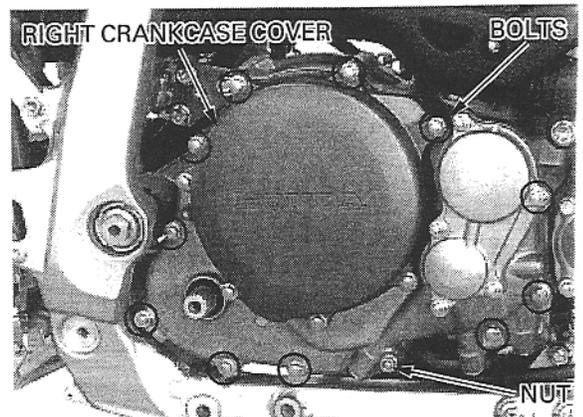

Remove the gasket, dowel pins and orifice/O-ring.

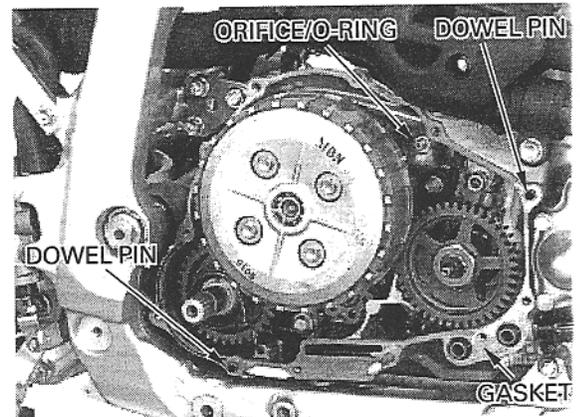

### KICKSTARTER SPINDLE NEEDLE BEARING REPLACEMENT

Inspect the kickstarter spindle oil seal and needle bearing for wear, excessive play and damaged, replace if necessary as follows:

Remove the oil seal.

