


CLUTCH/KICKSTARTER/GEARSHIFT LINKAGE


Release the hook end of the return spring from the kickstarter spindle hole; remove the return spring and collar.

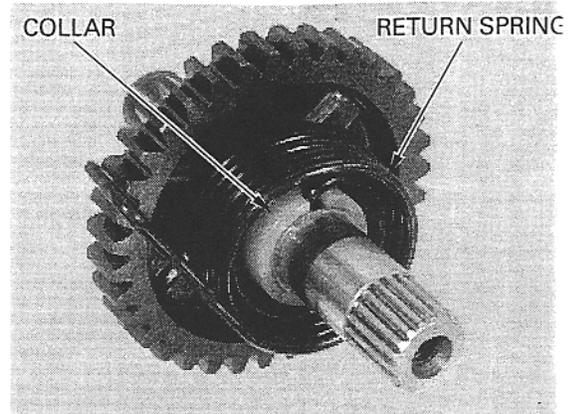

Remove the starter ratchet.



Remove the snap ring, washer and starter pinion gear from the spindle.

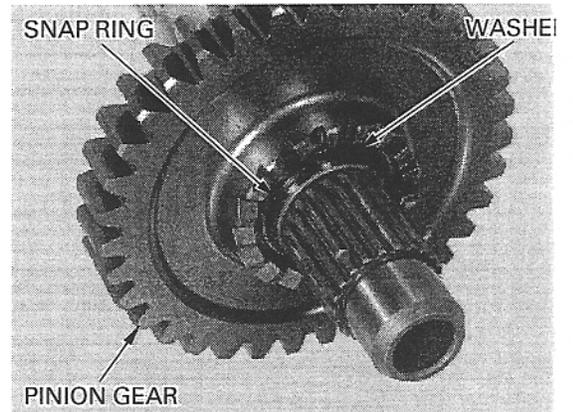

INSPECTION

Measure the I.D. of the kickstarter pinion gear.

SERVICE LIMIT: 22.09 mm (0.870 in)

Measure the O.D. of the kickstarter spindle.

SERVICE LIMIT: 21.91 mm (0.863 in)

