


ALTERNATOR


LEFT CRANKCASE COVER REMOVAL

Remove the seat (page 2-2).


Remove the wire band.
Disconnect the alternator connectors and ignition pulse generator connector.
Refer to Section 17 for alternator inspection.

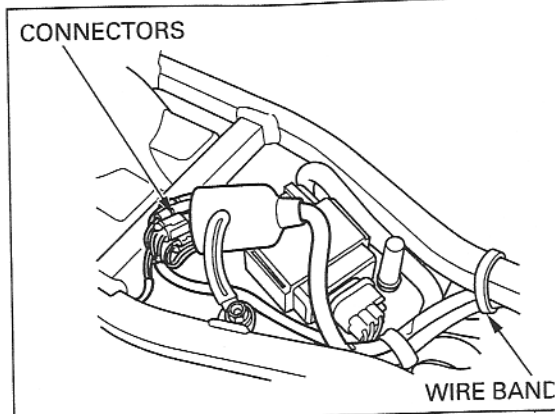

Remove the wire from the clamp and remove the wire band.

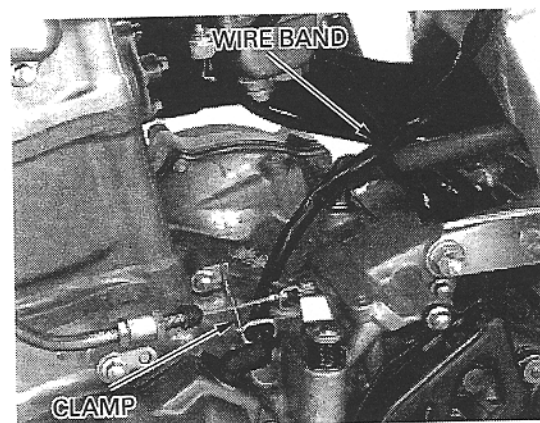

Loosen the left crankcase cover bolts in a crisscross pattern in several steps.
Remove the bolts and left crankcase cover.

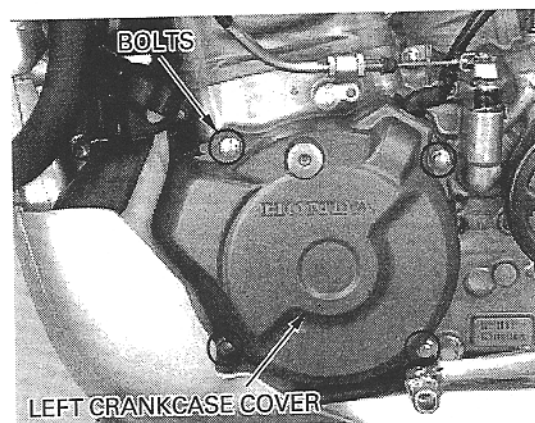

Remove the dowel pins and gasket.

