

STEERING STEM

REMOVAL

Remove the following:

- Front wheel (page 14-4)
- Front fender (page 2-3)
- Front brake caliper (page 16-12) without disconnecting the brake hose
- Front visor (page 2-3)
- Speedometer (page 17-13)
- Handlebar (page 14-21)



Remove the steering stem nut and washer.

Remove the top bridge and fork legs (page 14-9).

Remove the steering stem adjusting nut.

TOOL:


Steering stem socket 07916-KA50100

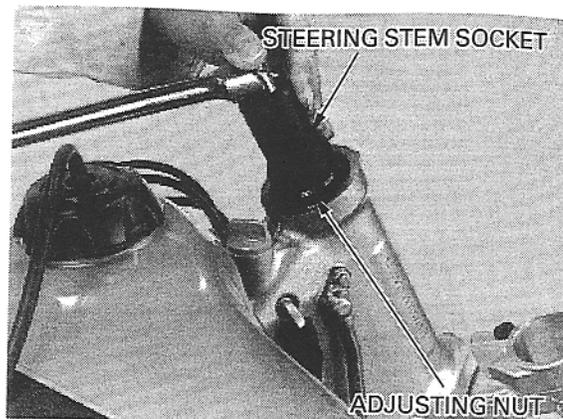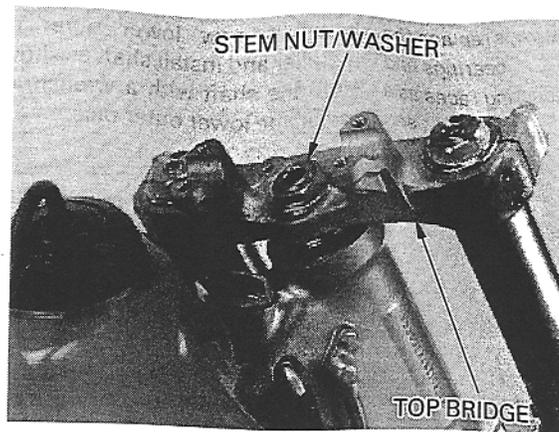

Remove the steering stem.

Remove the dust seal, upper tapered roller bearing.

Check the head bearings, outer races for wear or damage.

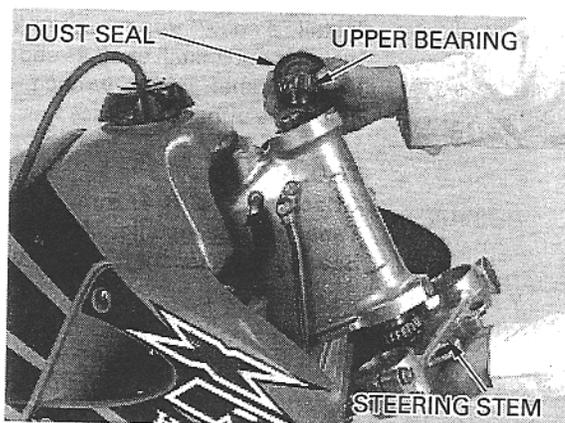

BEARING REPLACEMENT

Remove the lower bearing outer race from the head pipe using a special tool.

TOOL:

Ball race remover 07946-3710500

Remove the upper bearing outer race from the head pipe using a special tool.

TOOL:

Ball race remover attachment 07953-MJ10100

Ball race remover shaft 07953-MJ10200

