


## REAR WHEEL/SUSPENSION

Pack a new needle bearing with multi-purpose grease.  
 Press the needle bearing into the swingarm pivot so that the needle bearing surface is lower 4.0 mm (0.16 in) from the end of the swingarm surface.

**TOOLS:**


**Driver** 07949-3710001  
**Attachment, 28 × 30 mm** 07946-1870100  
**Pilot, 25 mm** 07746-0040600

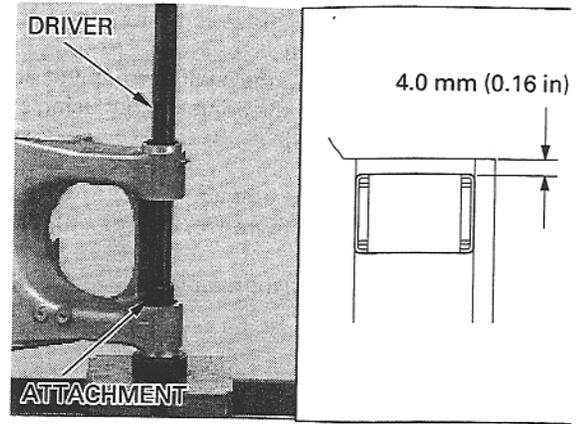

Pack a new needle bearing with multi-purpose grease.  
 Press the needle bearings into the swingarm pivot so that the needle bearing surface is lower 5.0 mm (0.20 in) from the end of the swingarm surface.

**TOOLS:**

**Driver** 07749-0010000  
**Attachment, 32 × 35 mm** 07746-0010100  
**Pilot, 25 mm** 07746-0040600

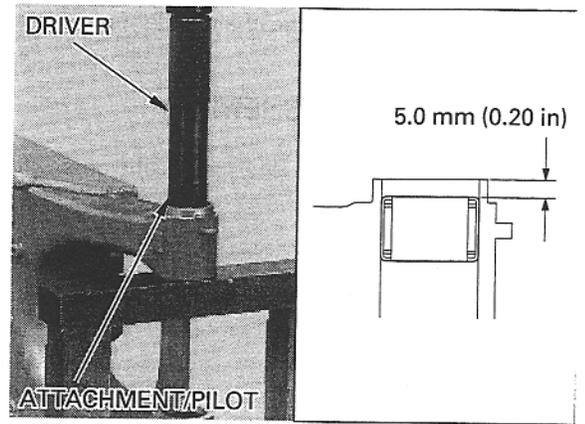

## ASSEMBLY

