



Install the following:

- Dust seals
- Pivot collars
- Dust seal caps

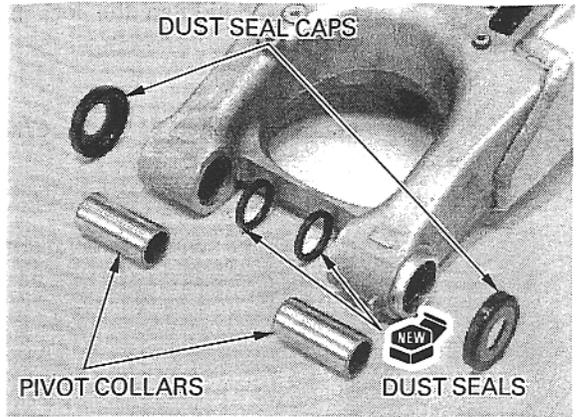


Install the chain slider with its cut-out and tab on the swingarm.

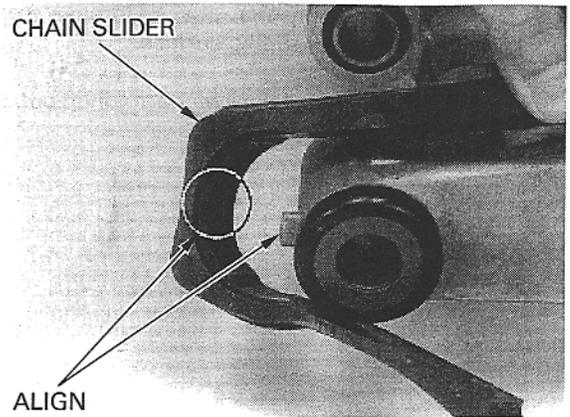

Clean and apply a locking agent to the screw threads.
Install and tighten the screws to the specified torque.

TORQUE: 4 N·m (0.4 kgf·m , 2.9 lbf·ft)

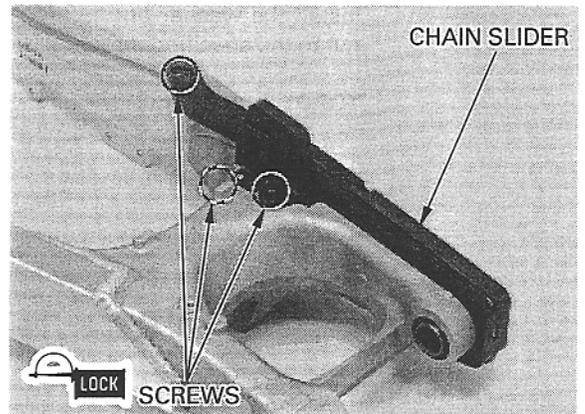

INSTALLATION

Install the swingarm onto the frame.
Temporarily install the swingarm pivot shaft from the left side.

Install and tighten the adjusting bolt to the specified torque.

TOOL:
Lock nut wrench, 20 mm 07VMA-MBB0100

TORQUE: 12 N·m (1.2 kgf·m , 9 lbf·ft)

Loosen the adjusting bolt to the torque of 0 N·m (0 kgf·m, 0 lbf·ft), then retighten the bolt to the specified torque.

TORQUE: 7 N·m (0.7 kgf·m , 5.1 lbf·ft)

