

Measure the master cylinder piston O.D.

SERVICE LIMIT: 12.64 mm (0.498 in)

ASSEMBLY

CAUTION:

Keep the piston, cups, spring, snap ring and boot as a set; do not substitute individual parts.

Coat all parts with clean brake fluid before assembly.

Dip the piston in brake fluid.

Install the spring to the piston.

Install the piston assembly.

Apply silicone grease to the piston contact area of the push rod.

CAUTION:

When installing the cups, do not allow the lips to turn inside out.

Install the push rod into the master cylinder.
Install the snap ring using a special tool.

CAUTION:

Be certain the snap ring is firmly seated in the groove.

TOOL:

Snap ring pliers

07914-SA50001

Install the boot.

INSTALLATION

Apply brake fluid to a new O-ring and install it onto the reservoir hose joint.

