

### High Air Temperature

35°C (95 °F) or above

1. Do not use the choke.
2. Open the throttle slightly.
3. Start the engine.


### Low Air Temperature

10 °C (50 °F) or below

1. Follow steps 1–2 under “Normal Air Temperature.”
2. When engine speed begins to pick up, operate the choke knob to keep fast idle at:  
2,500 – 4,000 min<sup>-1</sup> (rpm)
3. Continue warming up the engine until it runs smoothly and responds to the throttle when the choke knob (1) is at Fully OFF (B).

### **CAUTION:**

- \* Snapping the throttle or fast idling for more than about 5 minutes at normal air temperature may cause exhaust pipe discoloration.
- \* Extended use of the choke may impair piston and cylinder wall lubrication.

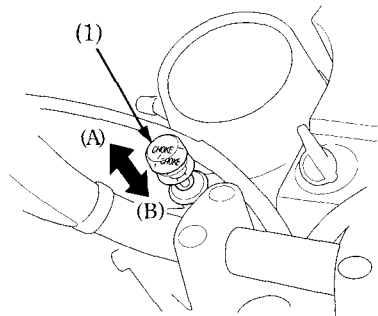

(1) Choke knob

(A) Fully ON

(B) Fully OFF