


be removed.

- To install, reverse the removal procedure. Be sure to fit the tongue of the left fork leg into the groove ⑦ in the brake backing plate.

Always use a new cotter pin after tightening the axle nut to 300~400kg-cm (22~28lbs. ft.).


- Check front brake adjustment.

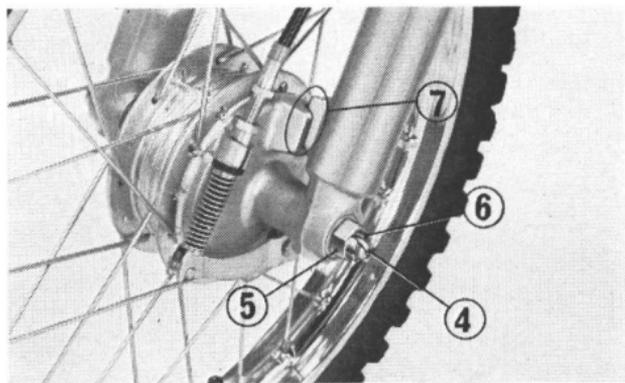

- ④ Cotter pin
- ⑤ Front axle nut
- ⑥ Front axle
- ⑦ Front brake backing plate groove

Rear wheel removal

- Remove the rear brake adjuster ①.
- Remove the drive chain. (See page 49)
- Pull the cotter pin ② out of the rear axle nut ③.
- Remove the rear axle nut and pull out the rear axle ④. The rear wheel can now be removed.
- To install, reverse the removal procedure. Be sure to fit the tongue of

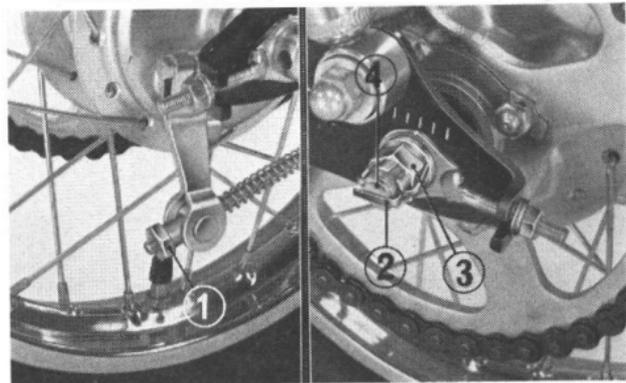

- ① Rear brake adjuster
- ② Cotter pin
- ③ Rear axle nut
- ④ Rear axle