


2. Get off the FOURTRAX while you continue holding the brakes.
3. Set the parking brake, shift into neutral and turn the engine off.
4. Then assess the situation.

If the FOURTRAX starts rolling backwards before you begin braking, keep your weight uphill, carefully apply the front brakes first, then carefully apply the rear brake as well. Do not apply either brake abruptly if you are rolling backwards, or the vehicle may overturn.

**NOTE:**

Remember that operating any brake control with four-wheel drive will cause braking at both the front and rear wheels.

If the FOURTRAX continues sliding backwards after you've applied the brakes, get off and away from the vehicle.

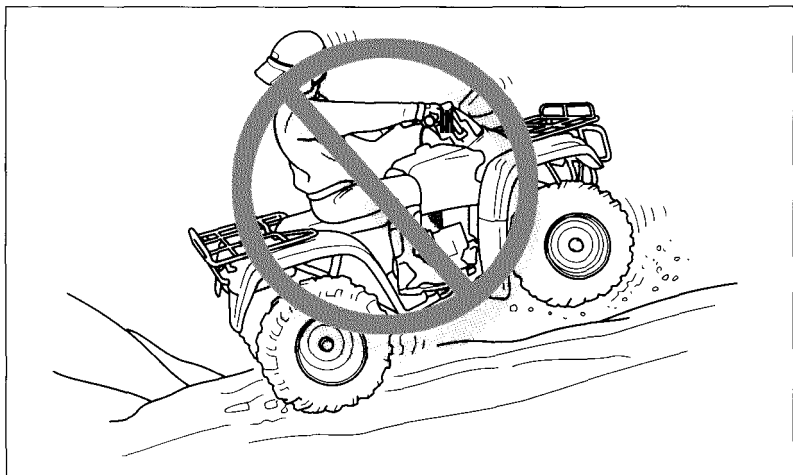

**Fig. 3-10** If you roll backwards down a hill, don't apply either brake abruptly.