


## Digital Clock Setting

The digital clock shows the hour and minute. To adjust the time format and clock, proceed as follows:

1. Turn the ignition switch ON.
2. Press SEL button to select the odometer or current fuel mileage.

Odometer:

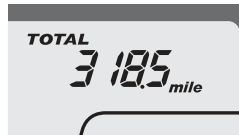


or


Current fuel mileage:



3. Press and hold SEL button until the current time format start flashing.

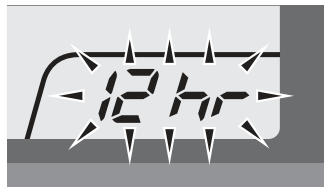


4. Press SEL button to select "12 hr" or "24 hr".

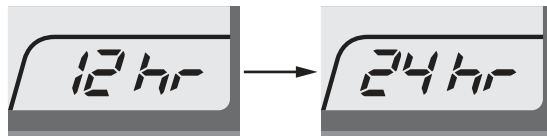


5. Press and hold SEL button. The time format is set, and then the display moves to the clock setting.


6. Press SEL button until the desired hour is displayed.

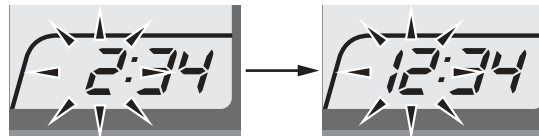

7. Press and hold SEL button. The minute digits start flashing.

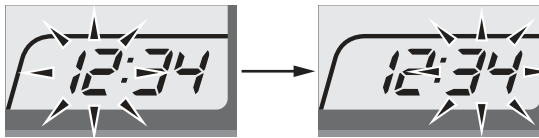

8. Press SEL button until the desired minute is displayed.

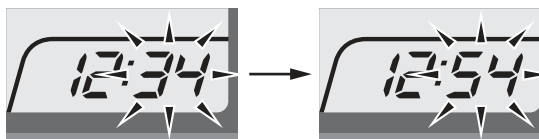


9. Press and hold SEL button. The clock is set, and then the display moves to the backlight brightness adjustment.

The established setting can also be set by turning the ignition switch to the OFF position. The control is automatically switched from the setting mode to the normal mode if the button is not pressed for about 30 seconds. Even in this case, established setting is maintained.

## Backlight Brightness Adjustment

To adjust the backlight brightness, proceed as follows:

1. Refer to Digital Clock on previous step.
2. Press SEL button. The brightness is switched.

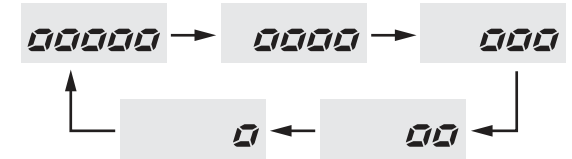

3. Press and hold SEL button. The backlight is set, and then the display moves the changing of the speed and mileage unit.

The established setting can also be set by turning the ignition switch to the OFF position. The control is automatically switched from the setting mode to the normal mode if the button is not pressed for about 30 seconds. Even in this case, established setting is maintained.