


## Throttle Inspection

1. Check that the throttle assembly is positioned properly (the end of the throttle housing (1) is aligned with the paint mark (2) on the handlebar) and the securing bolts are tight.

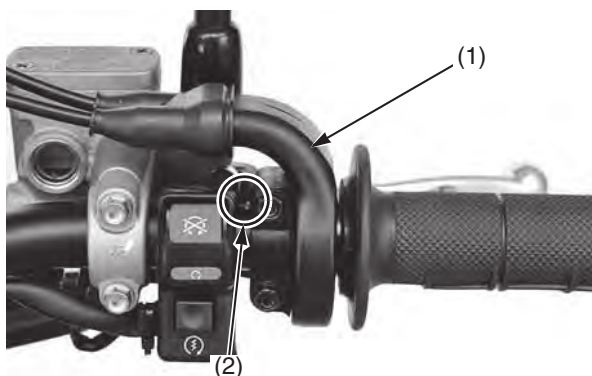

(1) throttle housing  
(2) paint mark

2. Check for smooth rotation of the throttle (3) from fully open to fully closed in all steering positions. If there is a problem, see your dealer.




(3) throttle

3. Inspect the condition of the throttle cables from the throttle grip down to the throttle body. If the cable is kinked or chafed, have it replaced.
4. Check the cables for tension or stress in all steering positions.
5. Lubricate the cables with a commercially available cable lubricant.

## Throttle Cable Lubrication

Check for smooth rotation of the throttle. If necessary, apply multi-purpose grease to sliding surface of the throttle cable ends.

1. Slide the dust cover (1).
2. Remove the throttle housing bolts (2).
3. Remove the throttle housing (3) from the throttle pipe (4).
4. Thoroughly lubricate the throttle cable ends (5) with multi-purpose grease.

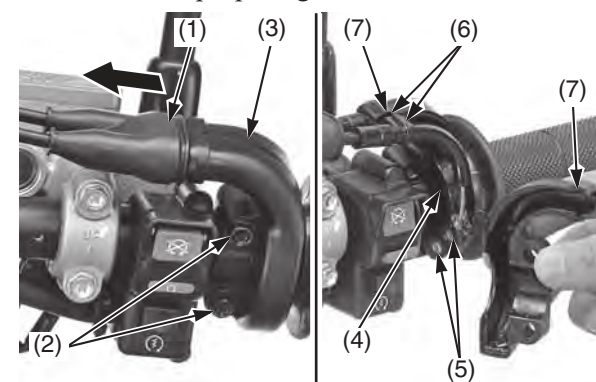

(1) dust cover  
(2) housing bolts  
(3) throttle housing  
(4) throttle pipe  
(5) throttle cable ends  
(6) lugs  
(7) grooves

5. Install the throttle housing, then tighten the throttle housing bolts to the specified torque:  
7 lbf-ft (10 N·m, 1.0 kgf-m)

### NOTICE

*Align the lugs (6) of the wire guide with the grooves (7) of the throttle housing.*

6. Install the dust cover in reverse order.

If the throttle operation is not smooth, replace the throttle cable.

Be sure the throttle returns freely from fully open to fully closed automatically, in all steering positions.