

Headlight Dimmer Switch (1)

Push the dimmer switch to “Hi” to select high beam or to “Lo” to select low beam.

Passing Light Control Switch (2)


When this switch is pressed, the headlight flashes on to signal approaching cars or when passing.

Turn Signal Switch (3)

Move to L to signal a left turn, R to signal a right turn. Press to turn signal off.

Horn Button (4)

When this button is pressed the horn sounds.

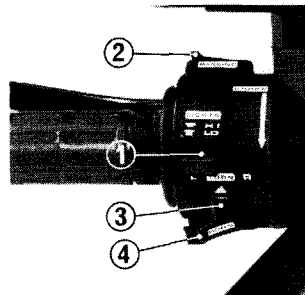

Inverseur code-phare (1)

Déplacer l'interrupteur vers “Hi” pour choisir le faisceau du feu de route et vers “Lo” pour obtenir un faisceau rapproché.

Commande des feux de dépassement (2)

Exercer une pression sur le bouton pour le fonctionnement de l'avertisseur lumineux pour dépassement.

Commande de clignotants (3)

Déplacer vers L pour signaler un virage à gauche, vers R pour signaler un virage à droite. Enfoncer pour annuler le signal.

Commande d'avertisseur (4)

Exercer une pression sur le bouton d'avertisseur pour assurer le fonctionnement de l'avertisseur sonore.