


## Rear Wheel Removal

1. Raise the wheel off the ground by placing a block under the engine.
2. Remove the rear brake adjusting nut (1) and disconnect the brake rod (2) from the brake arm (3).
3. Remove the cotter pin (4) and axle nut (5).
4. Loosen the lock nut (6) and chain adjuster (7) on the both side of the swingarm. Push the wheel forward and derail the drive chain from the driven sprocket.
5. Pull out the rear axle and remove the rear wheel.  
Remove the brake panel from the wheel hub, leaving it connected to torque arm.

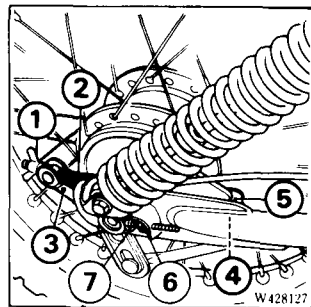

## Desmontaje de la rueda trasera

1. Levante la rueda del nivel del suelo colocando un bloque de madera debajo del motor.
2. Quite la tuerca de ajuste (1) del freno trasero y desconecte el vástago del freno (2) del brazo (3).
3. Quite la chaveta (4) y la tuerca del eje (5).
4. Afloje la contratuerca (6) y el ajustador (7) de la cadena en ambos lados del brazo oscilante. Empuje la rueda hacia adelante y saque la cadena de transmisión del piñón impulsado.
5. Saque el eje trasero y quite la rueda trasera.  
Quite el panel del freno del cubo de la rueda, dejándolo conectado al brazo de fuerza.