
FUEL LINE

Check the fuel line for deterioration, damage or leakage.
Replace the fuel line if necessary.

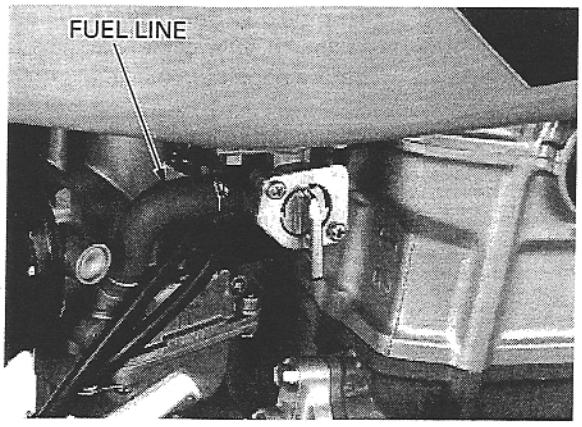


FUEL STRAINER SCREEN

⚠WARNING

- ***Gasoline is extremely flammable and is explosive under certain conditions. Work in a well ventilated area. Smoking or allowing flames or sparks in the work area or where the gasoline is stored can cause a fire or explosion.***
- ***Wipe up spilled gasoline at once.***

Turn the fuel valve OFF, disconnect the fuel line from the carburetor.
Turn the fuel valve to RES and drain the fuel into an approved gasoline container.
Remove the fuel tank (page 2-5).

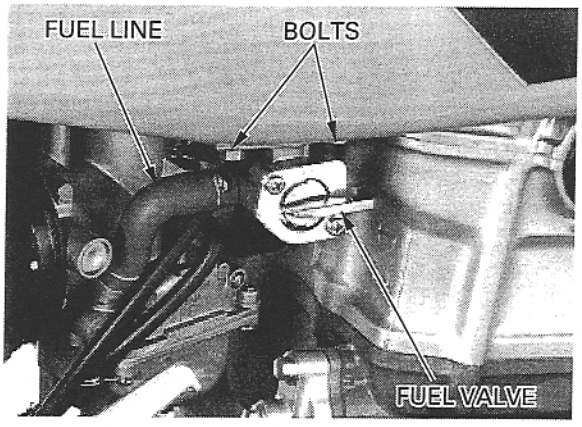


Remove the two bolts attaching the fuel valve to the fuel tank, then remove the fuel valve with its strainer screen.

Clean the fuel strainer screen.
Install a new O-ring to the fuel valve.
Install the fuel valve and tighten the bolts to the specified torque.

TORQUE: 9 N·m (0.9 kgf·m , 6.5 lbf·ft)

Install the fuel tank and connect the fuel line.
After filling the fuel tank, check for fuel leaks.

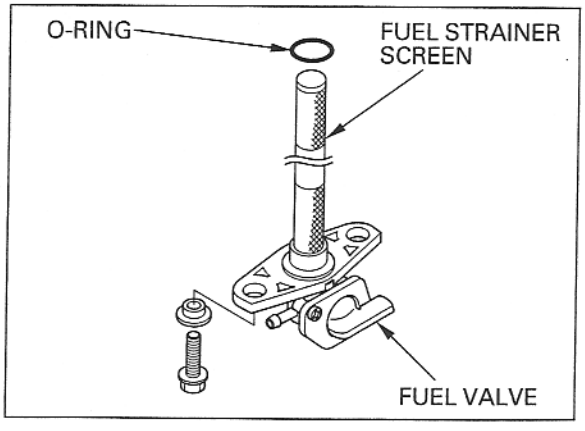

THROTTLE OPERATION

Check that the throttle grip opens smoothly to full throttle and free closes, automatically, in all steering positions.

Make sure there is no deterioration, damage or kinking in the throttle cables.

Measure the free play at the throttle grip flange.

FREE PLAY: 2.0—6.0 mm (1/16—1/4 in)

