


Remove the following:
- O-ring
- Link arm set screw
- Throttle drum assembly
- Return spring
- Plastic washer
- Throttle valve assembly

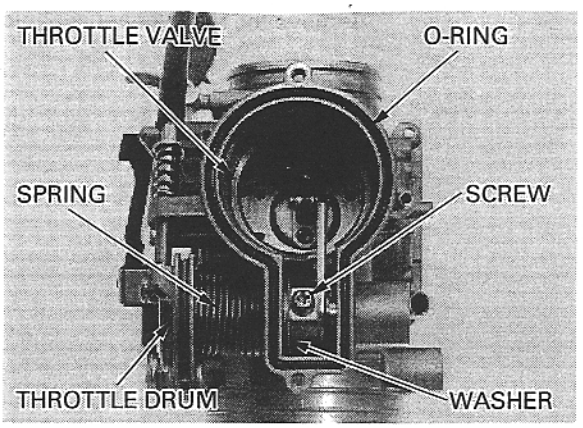

Remove the two screws attaching the link arm to the throttle valve and separate the link arm from the throttle valve.

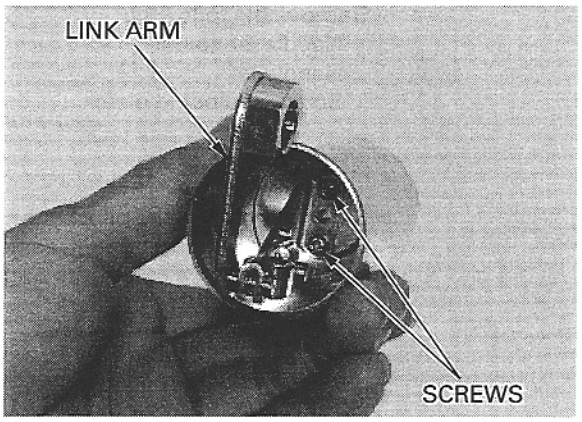

Remove the jet needle.
Check the throttle valve and jet needle for wear, nicks or other damage.

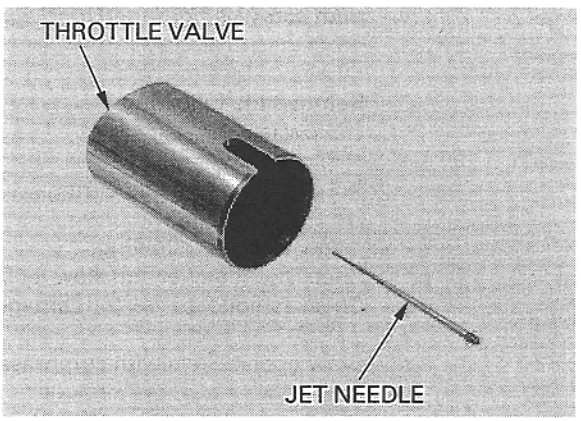

AIR CUT-OFF VALVE

Remove the screws and air cut-off valve cover.

