
FRONT FENDER

REMOVAL/INSTALLATION

Remove the bolts, washers and collars.
Remove the front fender.


Installation is in the reverse order of removal.

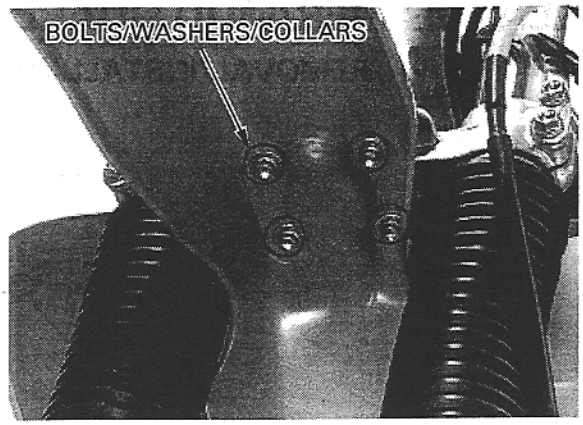

FRONT VISOR

Remove the front visor mounting bolts.

Remove the front visor.

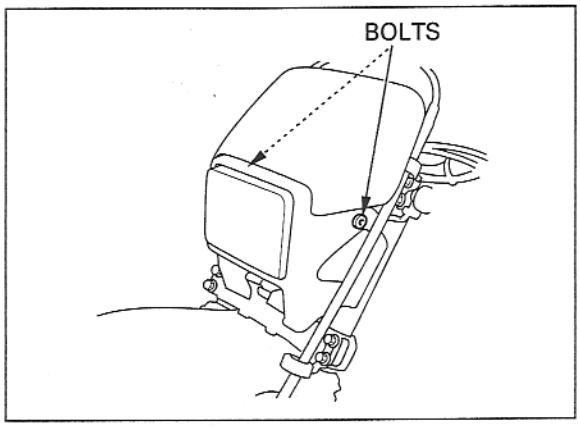

Install the front visor aligning its prongs with holes on the steering stem.

Installation is in the reverse order of removal.

