OIL PUMP

DISASSEMBLY

Remove the right crankcase cover (page 10-11).
Remove the oil filter cover (page 3-12).

Remove the stopper ring and oil pump shaft.
Remove the inner rotor A.

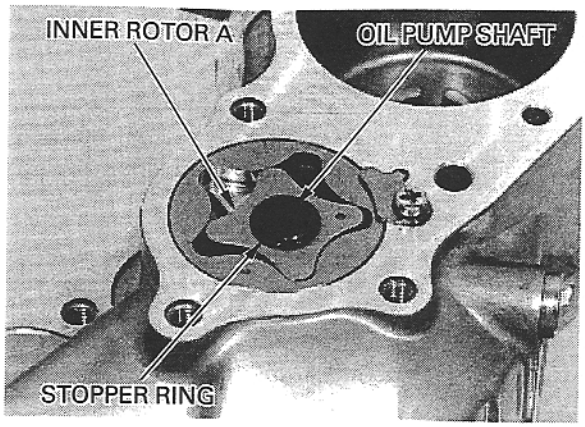

Remove the screw and outer rotor stopper plate.
Remove the outer rotor A.

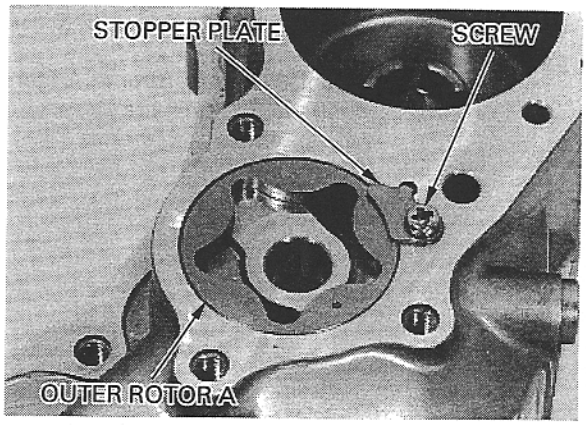

Remove the bolts and oil pump plate.

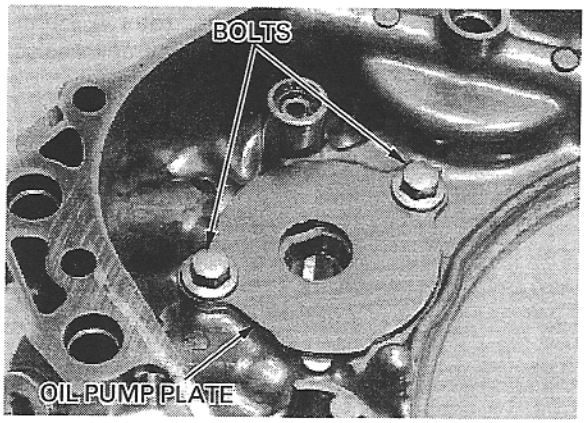

Remove the inner rotor B and outer rotor B.

