
Remove the reserve tank (page 6-12).

Remove the reserve tank cap from the reserve tank and drain the reserve coolant.


Empty the coolant and rinse the inside of the reserve tank with water.

Install the reserve tank (page 6-12).

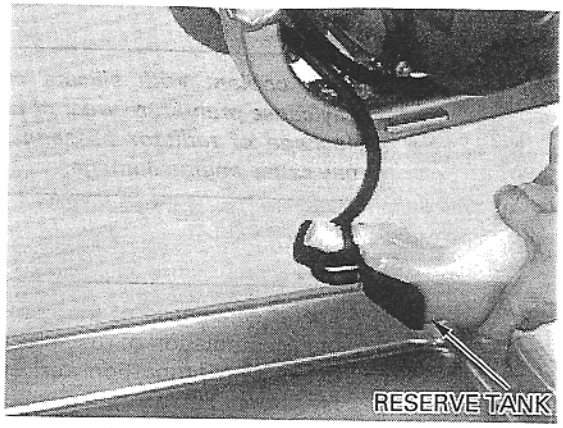


Fill the system with the recommended coolant through the filler opening up to filler neck.
Remove the reserve tank cap and fill the reserve tank to the upper level line.

Bleed air from the system as follows:
1. Shift the transmission into neutral.
   Start the engine and let it idle for 2—3 minutes.
2. Snap the throttle 3—4 times to bleed air from the system.
3. Stop the engine and add coolant up to the filler neck. Reinstall the radiator cap.

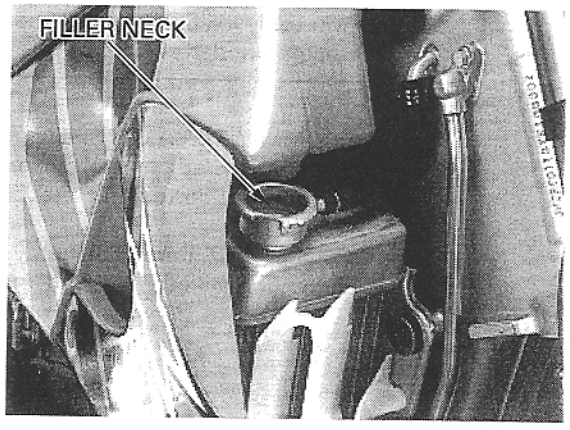

4. Check the level of coolant in the reserve tank and fill to the upper level if it is low.

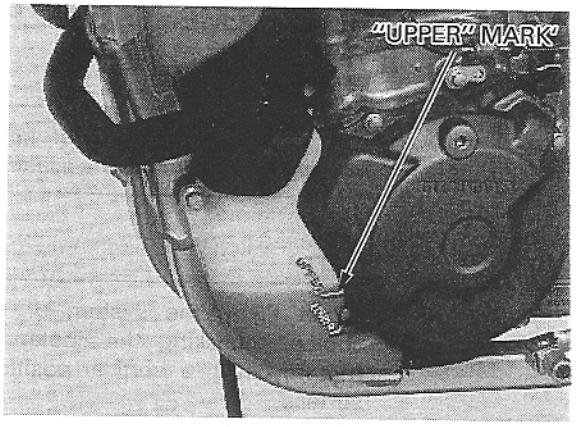

THERMOSTAT

REMOVAL

Remove the fuel tank (page 2-5).
Drain the coolant (page 6-5).

Remove the thermostat housing cover bolts and cover.

