Place a work stand under the engine.

Remove the upper hanger plate 10 mm bolt/nut/washer.
Remove the upper hanger plate 8 mm bolts/cap nuts/washers and upper hanger plates.

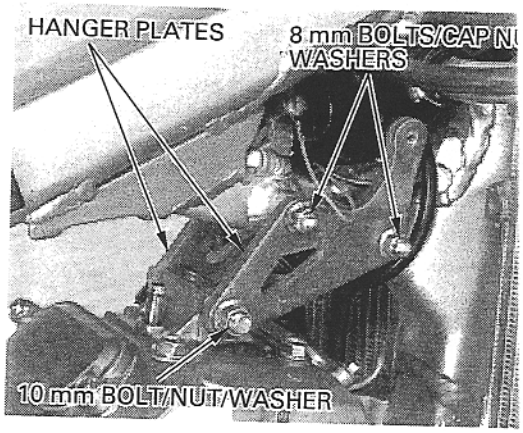

Remove the front hanger plate 10 mm bolt/nut/washer.
Remove the front hanger plate 8 mm bolts/nuts/washers and front hanger plates.

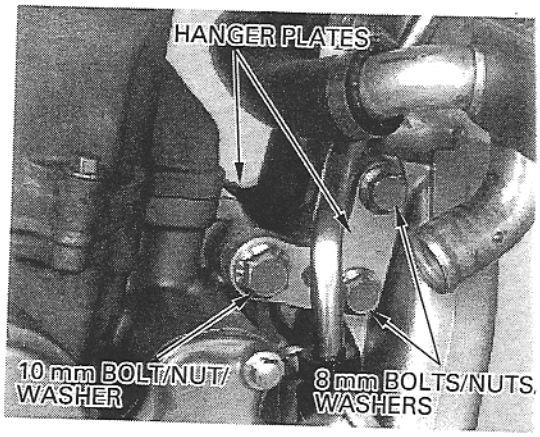

Remove the rear hanger plate 10 mm bolt/nut/washer.
Remove the rear hanger plate 8 mm bolts and rear hanger plate.

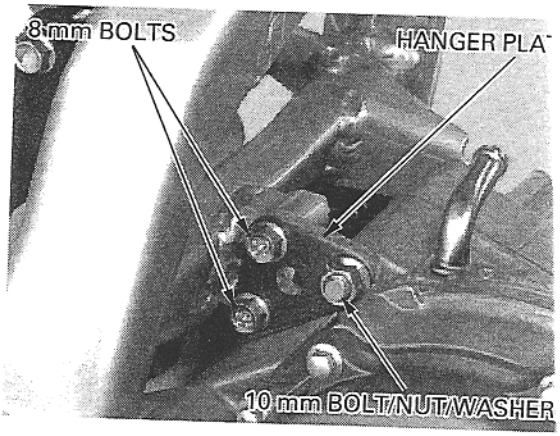

Remove the lower hanger plate 10 mm bolt/nut/washer.
Remove the lower hanger plate 8 mm bolts/nuts/washers and lower hanger plate.

