MAINSHAFT
Measure the mainshaft O.D. at the clutch outer guide area.

SERVICE LIMIT: 21.94 mm (0.864 in)

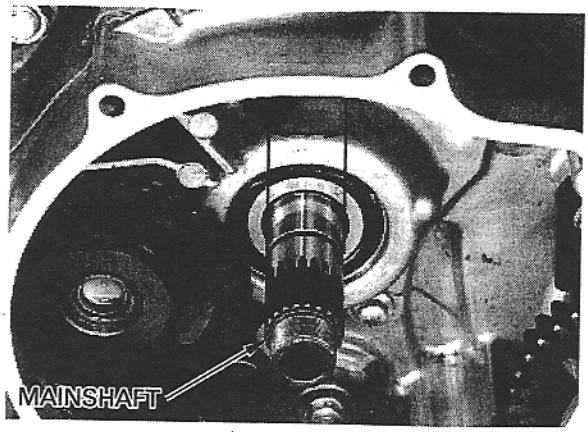

JUDDER SPRING, SPRING SEAT
Check the judder spring and spring seat for distortion, wear or damage.

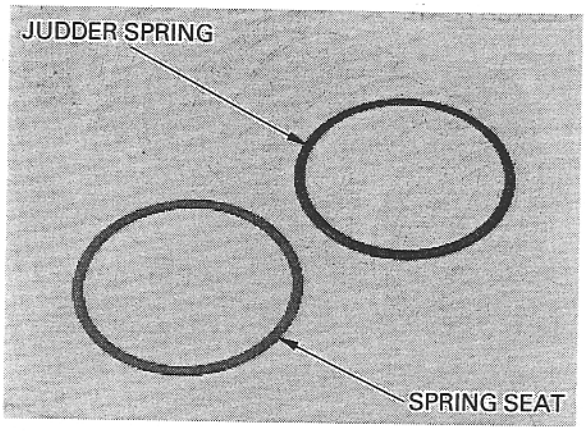

CLUTCH LIFTER LEVER
Check the clutch lifter lever for damage.

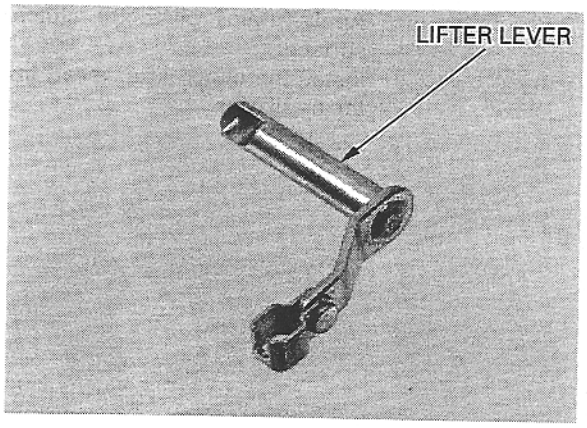

Check the oil seal and needle bearing for wear or damage.

