
Remove the kickstarter spindle needle bearing using the special tools and a hydraulic press.

TOOLS:


Driver	07749-0010000
Attachment, 24 × 26 mm	07746-0010700
Pilot, 20 mm	07746-0040500

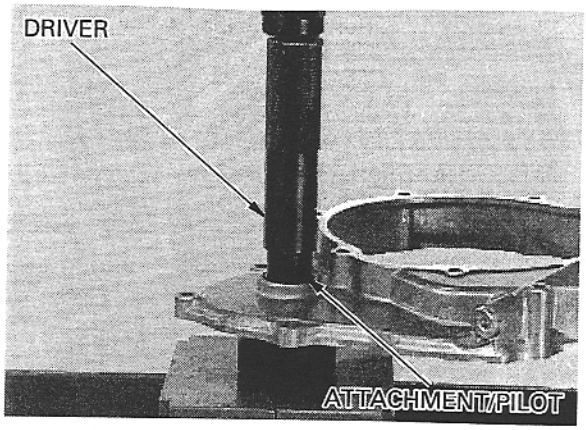


Install a new kickstarter spindle needle bearing using the special tools and a hydraulic press.

TOOLS:

Driver	07749-0010000
Attachment, 24 × 26 mm	07746-0010700
Pilot, 20 mm	07746-0040500

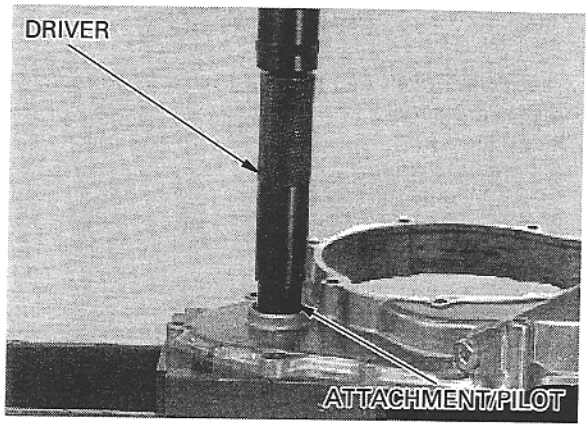

Install a new oil seal with the marking side facing out.
Press the oil seal into the crankcase cover even with the crankcase cover surface as shown.

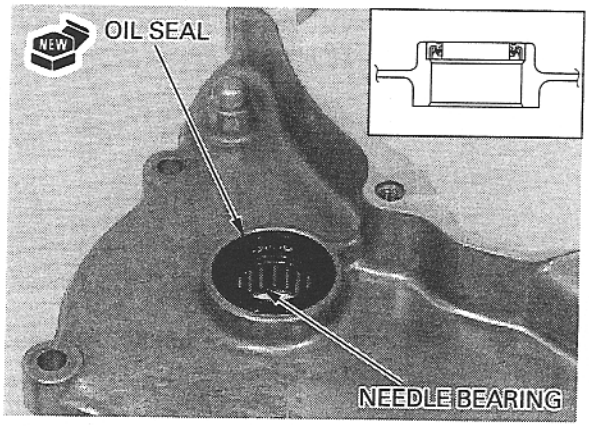

PRIMARY DRIVE GEAR

REMOVAL

Remove the right crankcase cover (page 10-11).
Remove the clutch (page 10-3).

Temporary install the clutch outer guide and clutch outer to the mainshaft.

Place the gear holder between the primary drive gear and driven gear.
Remove the primary drive gear lock nut.

TOOL:

Gear holder	07724-0010200

Remove the gear holder.
Remove the clutch outer and outer guide.

