
Apply molybdenum solution to the each parts sliding and rolling surface.


Set the sharp edge of the snap ring facing towards the outside.

Install the kickstarter pinion gear, thrust washer and snap ring to the kickstarter spindle.

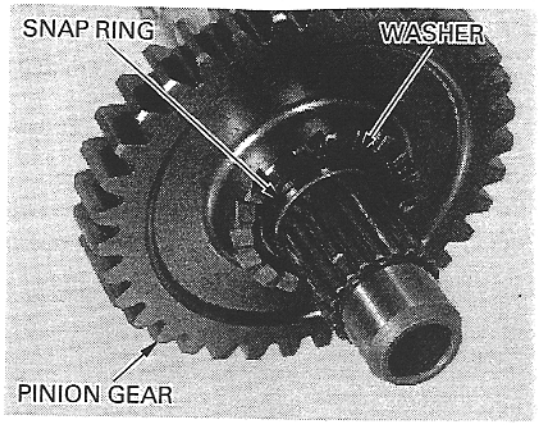


Align the punch marks on the spindle and ratchet.

Install the starter ratchet to the spindle.

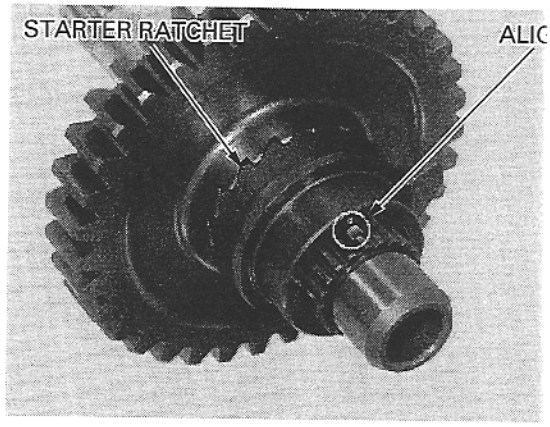

Install the collar aligning its cut-out with the hole in the spindle.
Install the return spring and insert the spring end into the cut-out on the collar and hole in the spindle.

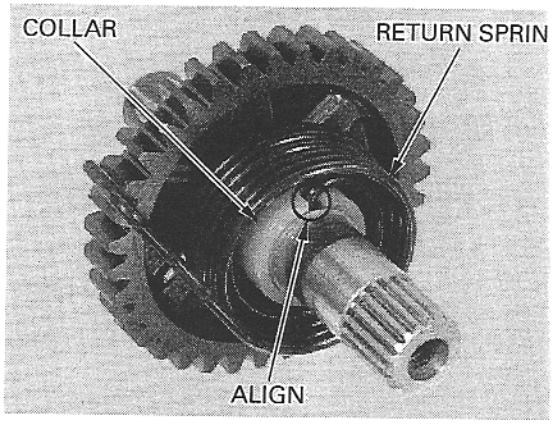

Install the ratchet spring, spring seat and thrust washer.

