

STATOR/IGNITION PULSE GENERATOR REMOVAL

Remove the wire clamp and grommet from the left crankcase cover.

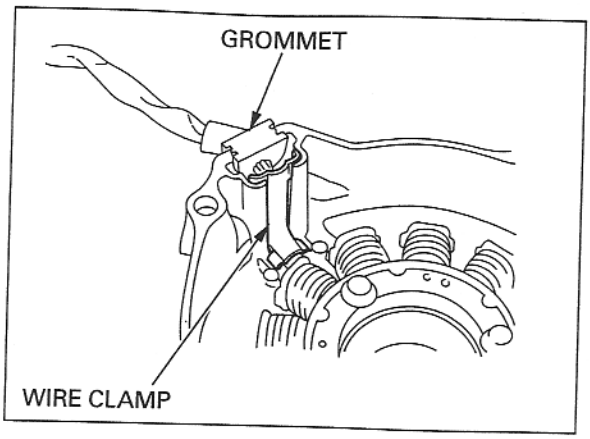


Remove the stator bolts and ignition pulse generator bolts.
Remove the stator/ignition pulse generator assembly.

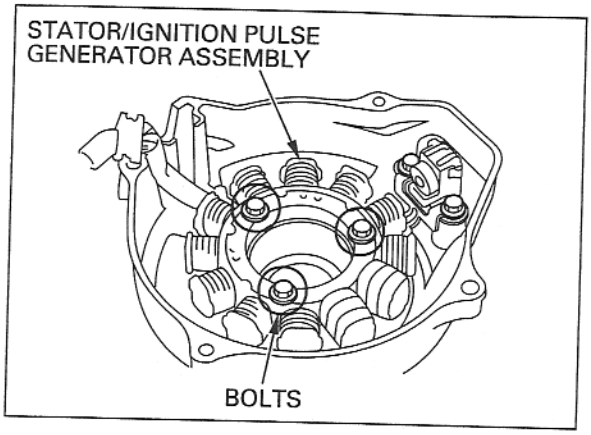

FLYWHEEL REMOVAL

Hold the flywheel with the flywheel holder.
Remove the flywheel bolt.

TOOL:
Flywheel holder 07725-0040000

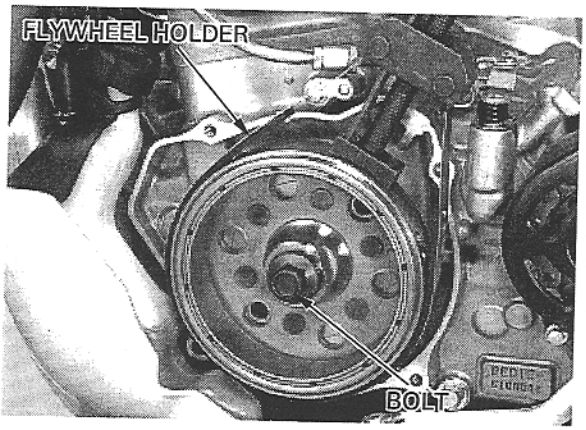

Remove the flywheel using the flywheel puller.

TOOL:
Flywheel puller 07733-0020001 or 07933-3950000

Remove the woodruff key from the crankshaft.

