
Remove the compression adjuster dust cover. Turn the adjuster counterclockwise to the softest position.


NOTE:

Record the number of clicks to the softest position.

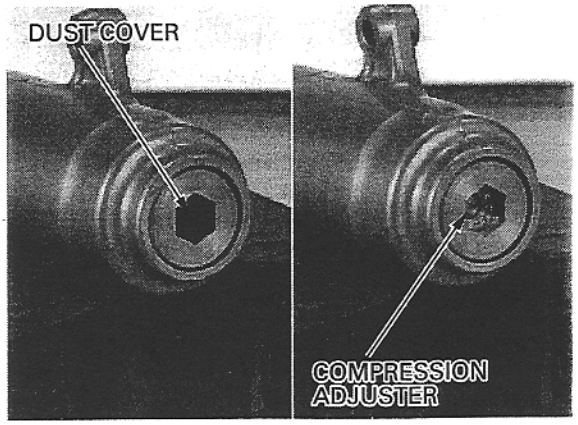


The fork cap is under spring pressure. Use care when removing and wear eye and face protection.

Remove the fork cap from the fork tube.

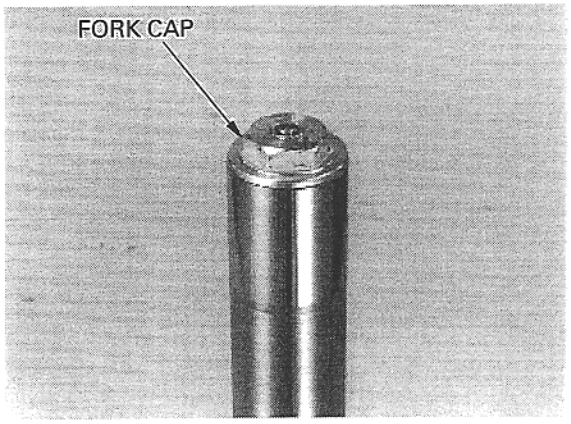

Hold the lock nut and remove the fork cap from the piston rod.

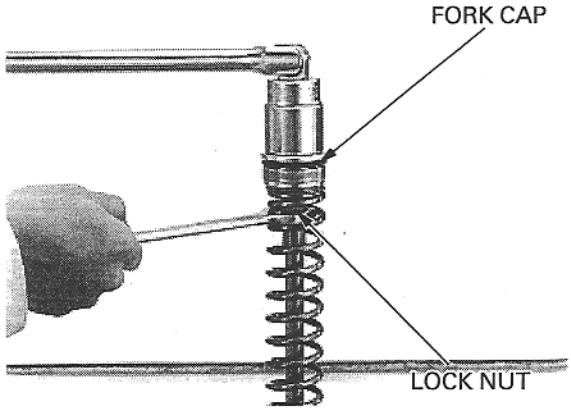

Remove the washers, spring seat and spring from the fork tube.

